
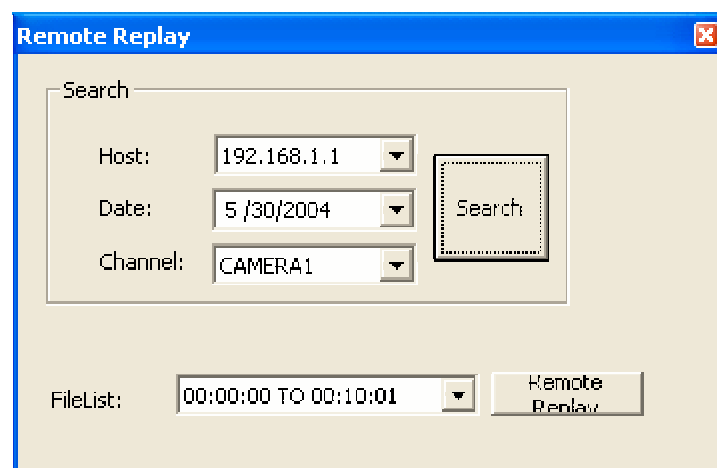


Click  button to playback the recording of remote Server;



Host: choose the remote Server IP;

Date: select the date;

Channel: choose the camera number;


Click “Search” button to find, if getting, the files name will show at “FileList”;

Choose the file, then click “Replay” button to play;

Putting mouse at the video for seconds will show the video information (Server IP & Camera number).

Internet Explorer remote view:

Please input the server's IP at URL of internet explorer,

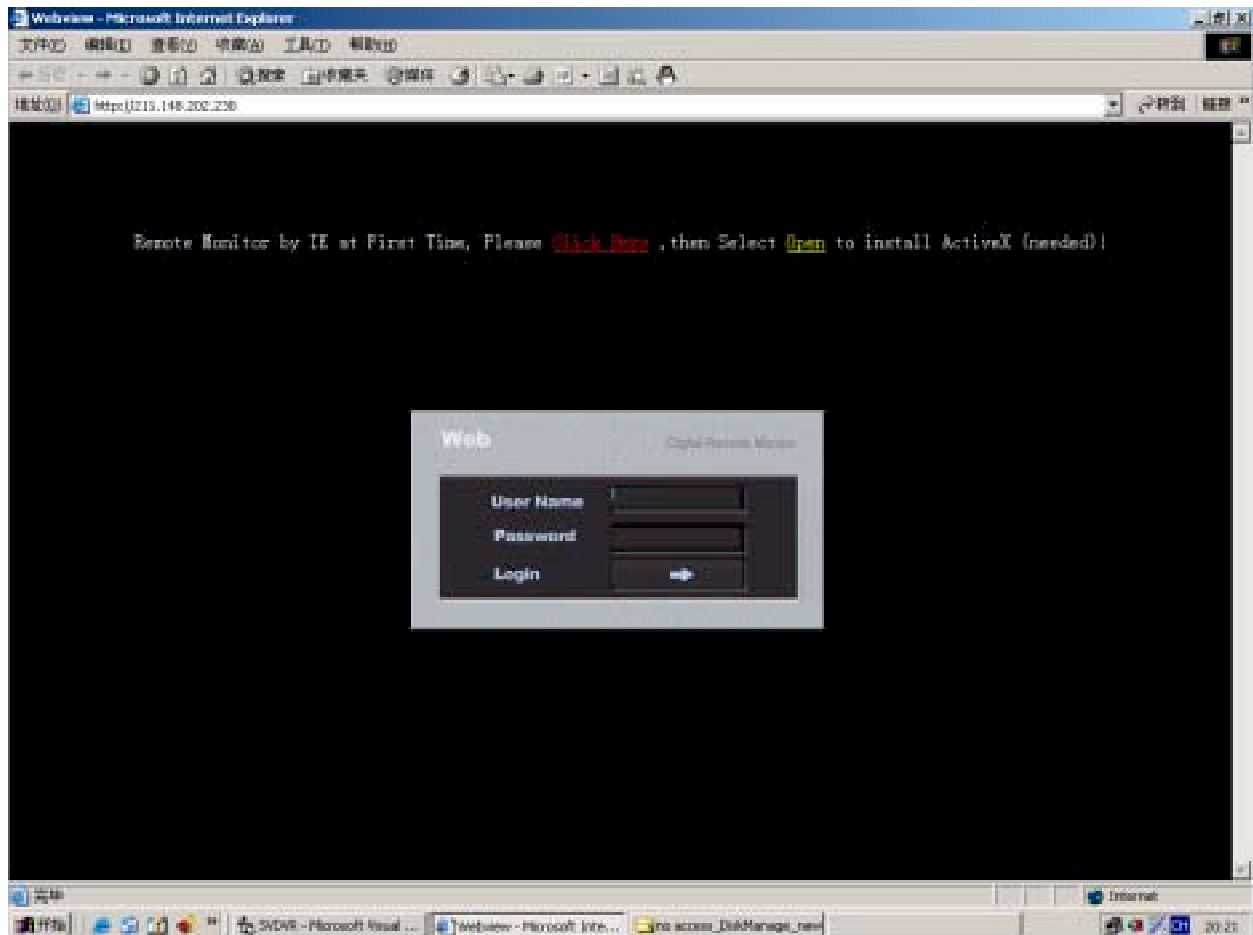

if first time view by IE, please click “[click here](#)” to install ActiveX..

Note:


Internet Explorer **Security Level** must be setup as **Low**,

Otherwise you maybe login success, but can't view the video!

User Name & Password:

The User Name & Password which input at here must be defined in Client-User of remote Server's Setup.

Click “Login” to log in.

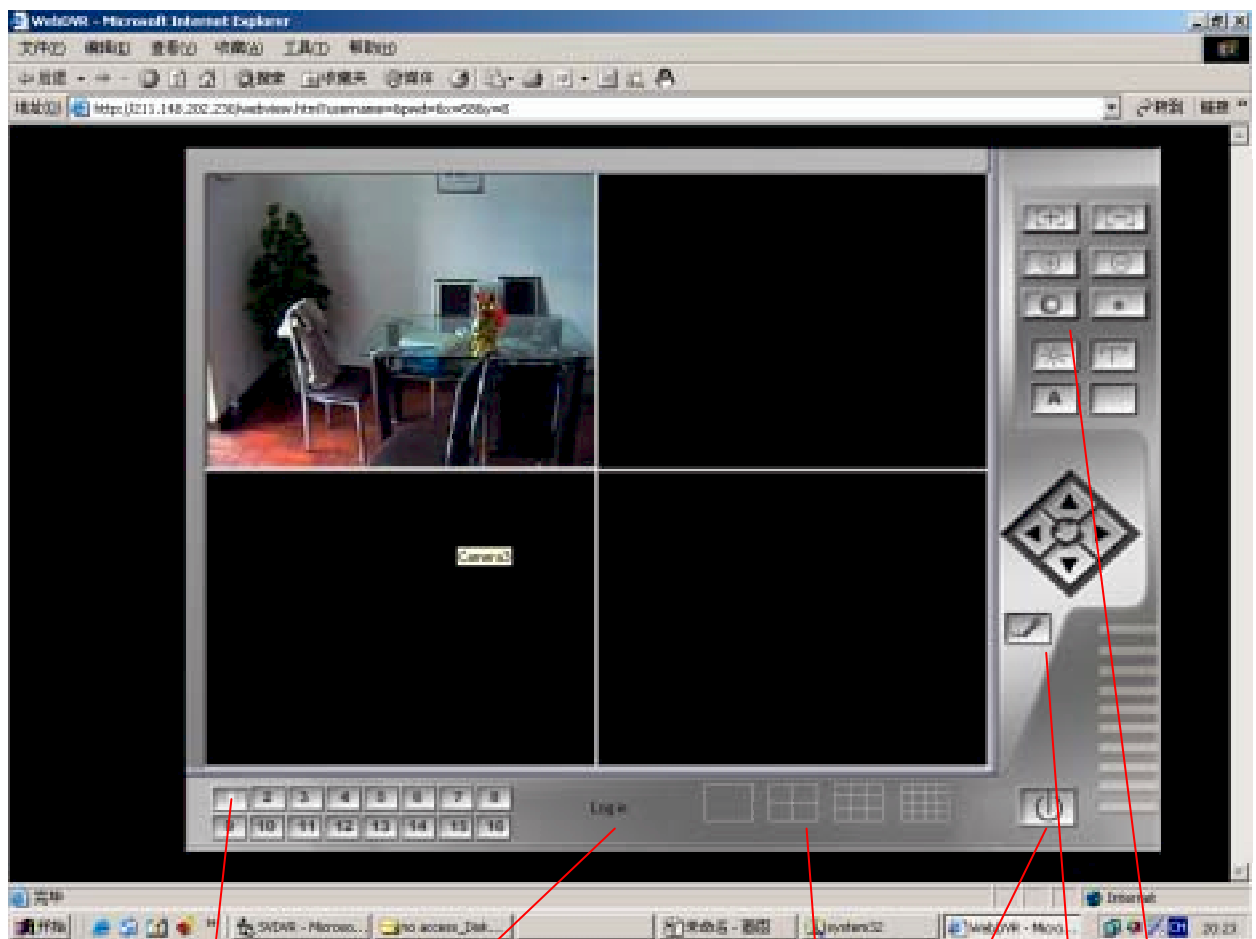

If login success, will show “log in” at here

Exit

talk

click camera number to view remote video which you desired

Split screen

PTZ